



Objet Geometries Ltd

www.objet.com

support@objet.com

VeroGray™ FullCure® 850 Material Software Update for Connex500 Printers

1. Purpose

This document provides instructions for installing the VeroGray software update on Connex500 printers.

2. Background

Objet has introduced a new model material: VeroGray–FullCure850, an opaque and rigid material.

This material provides excellent dimensional stability, detail visualization and surface quality, along with the Vero family's well-known benefits of high reliability and extended shelf life.

The VeroGray software update makes this material available for use.

3. Special Instructions

1. The printer server, all client workstations, and the printer computer must be updated.
2. Ensure that the Objet Studio and printer control software versions meet the requirements given in the material software update information published on the Objet website.
3. If you are installing this software update immediately after the installation of Objet Studio, you must open Job Manager at least once before you install this software update.

4. New Features

The software update adds VeroGray to the material list in both the Objet Studio and the printer control software.

5. Known Bugs

None

6. Notes

1. VeroGray comes weights of:
 - 2.0 kg
 - 3.6 kg

Use the following part numbers when ordering VeroGray.

Part Number	Description	Printer
OBJ-02244	Single 2.0 kg cartridge	Eden250/260/330
OBJ-02245	Pack of four 2.0 kg cartridges	Eden250/260/330
OBJ-03243	Single 3.6 kg cartridges	Eden260V/330/350/350V/500V and Connex500
OBJ-03244	Pack of three 3.6 kg cartridges	Eden260V/330/350/350V/500V and Connex500


2. VeroGray can only be used in those locations which meet Objet’s specifications for temperature and humidity according to Objet’s Site Preparation documentation.
3. This software update does not support Digital Material™ combinations.

7. Installation Instructions

User Account Configuration (for Windows Vista only)


Prior to installing this software update, you must perform the following configuration on the printer computer and all workstations running Windows Vista operating system.

1. Save any open files and close all applications.
2. Open the **Start** menu and select **Control Panel**.
The *Control Panel* window appears.

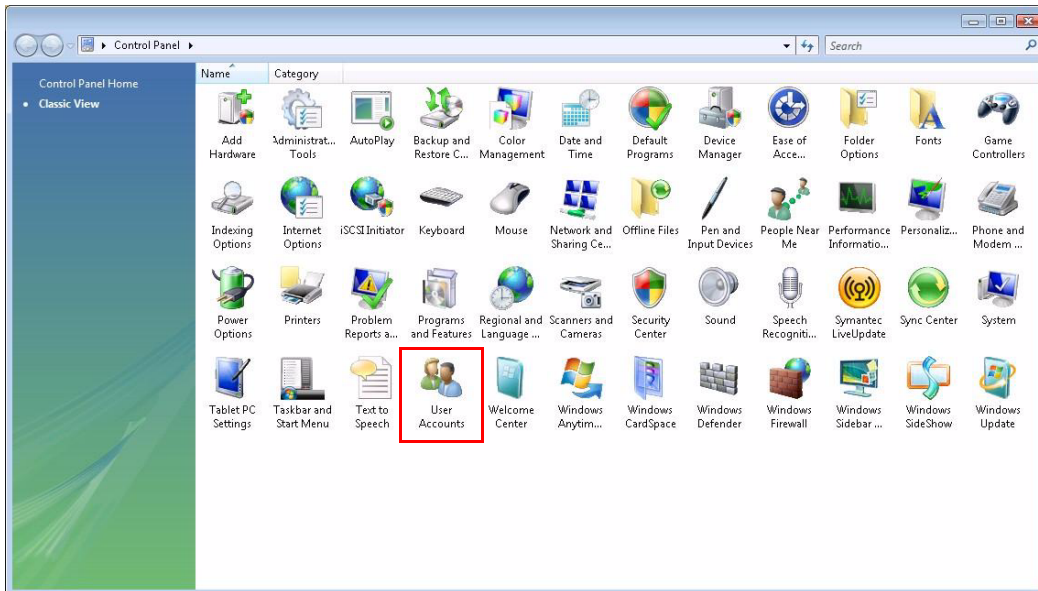

3. Select User Accounts.

The following window appears:

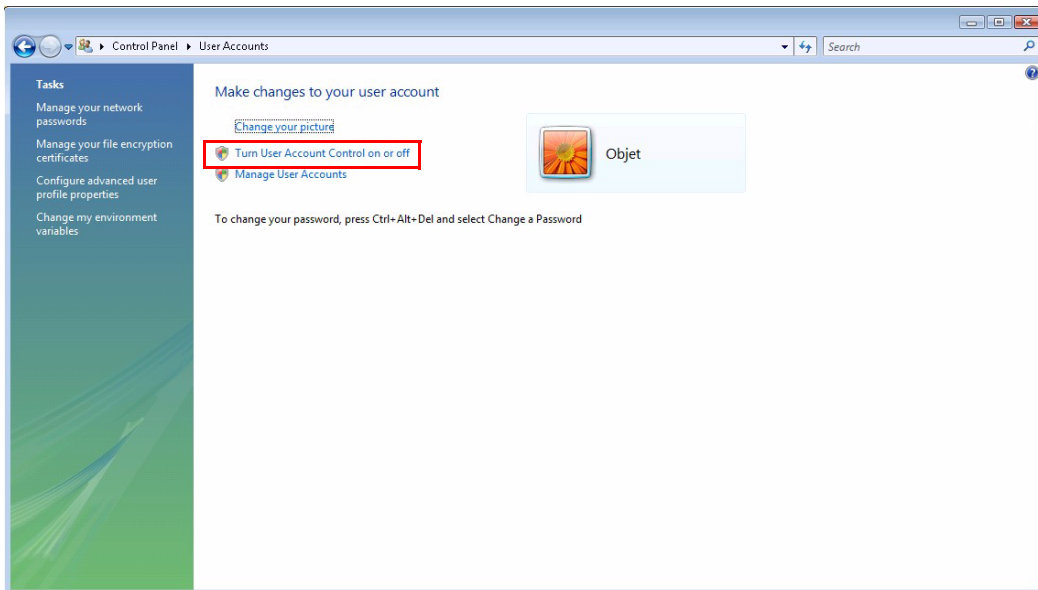

4. Click "Turn User Account Control on or off".

The following window appears:



5. Clear the checkbox and click OK.


6. Restart the computer.

Printer Computer and All Workstations


Follow the installation instructions below to install the VeroGray material software update on the printer computer and on all workstations running Objet Studio.

To install the software update:


1. Make sure the Objet Studio application is closed.
2. Double-click the *exe* file icon. The *Preparing Setup* screen appears.

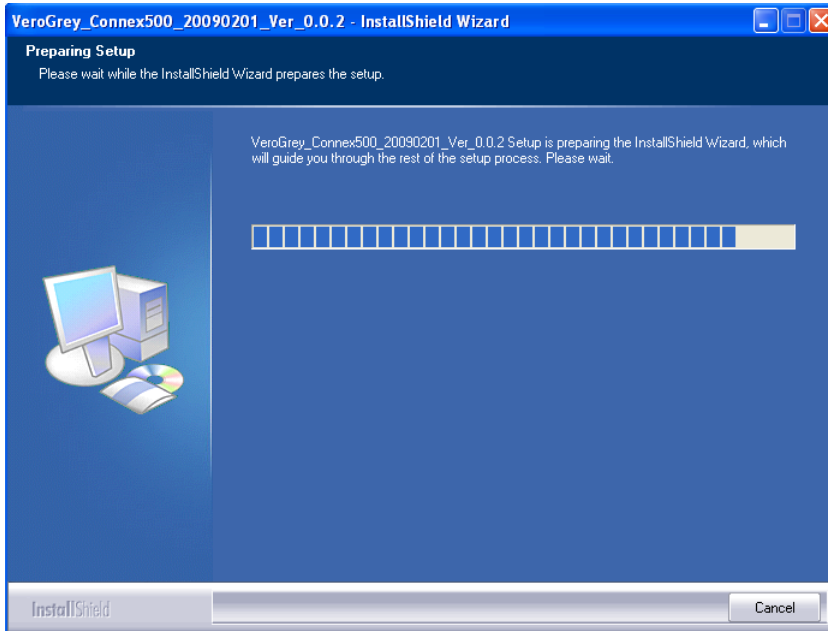


When the Installshield wizard is ready, the *Welcome* screen appears.

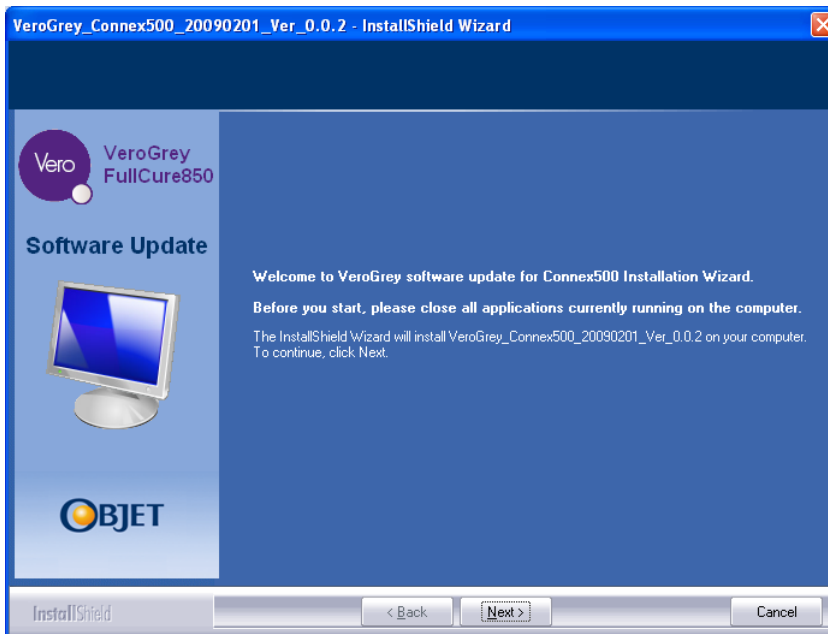

3. Click Next to run the installation wizard.
The installation begins showing the progress of the installation process.

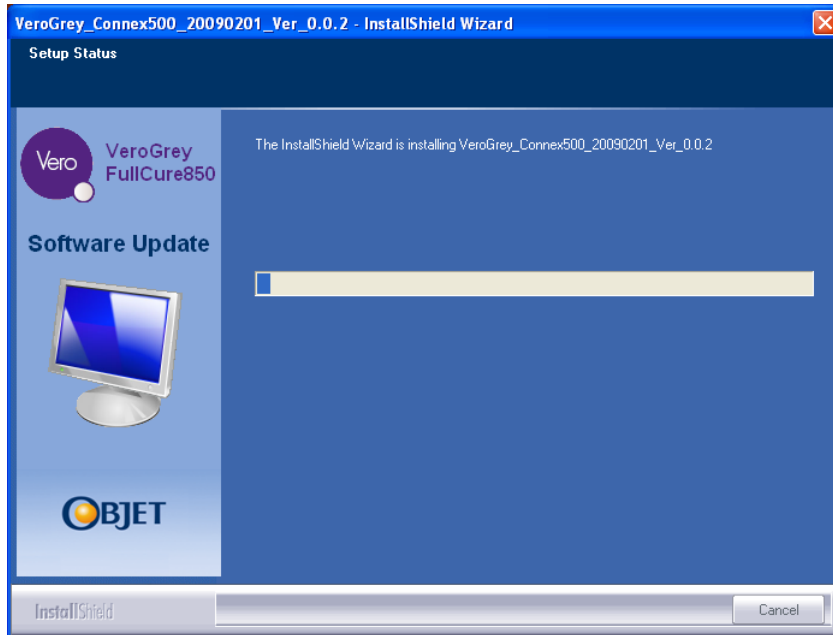


When the installation is complete, the final InstallShield wizard screen appears.

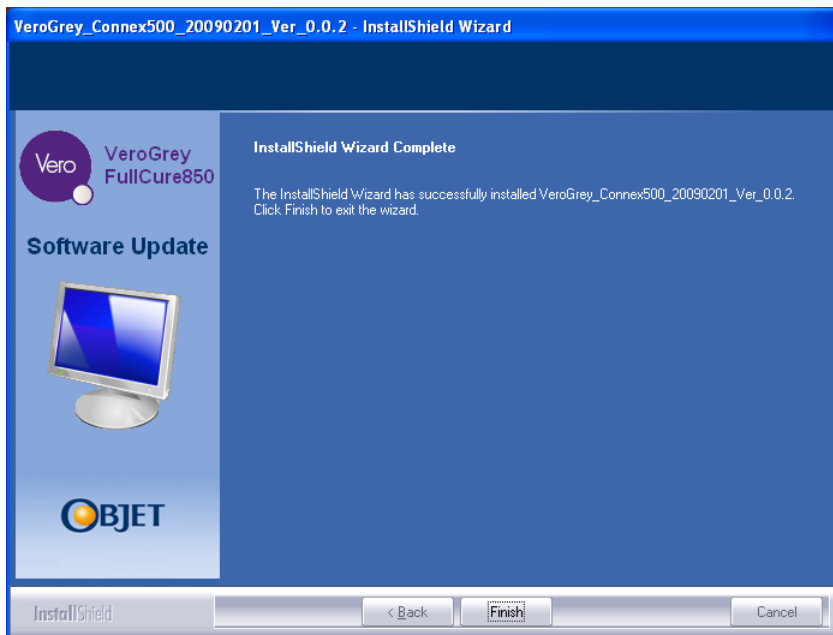

4. Click Finish to exit the wizard.

5. Make sure the material is available for selection.
 - Server and Client workstations—
Start the Objet Studio application and open the model-material drop-down menu. The material should be available for selection.

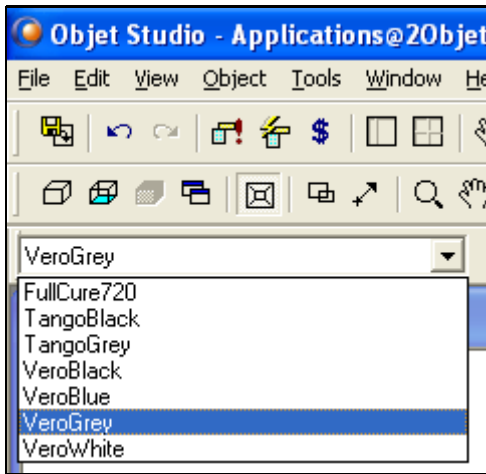

- Printer computer—
Start the printer control application and the Material Replacement wizard. Click Next. The MaterialSelection screen opens. The model-material drop-down menu should display the material as follows:



If you have any questions about the procedure in this document, contact your local Objet specialist.